



JetWear™ Dark

Dark InkJet Transfer Paper

version 1.4.2

You Will Need:


- JetWear™ Dark iron-on transfer paper
- Cotton or cotton/poly blend garment (dark or bright-colored)
- Commercial Heat Press or see below
- Hand iron and Large Pillowcase and Smooth, hard, heat-resistant surface

1. Printing Your Transfer

- Insert a single sheet of transfer paper into the printer with the printable surface loaded correctly for your printer. (See your printer manual if necessary.)
- Print image. Do not flip or mirror.

2. Peeling Away Paper Backing

- Holding image side of transfer toward you, make a small 1/4-inch hard crease on a corner.
- Flip the transfer over and crease the corner in the opposite direction.
- Gently tear the paper backing along the crease to separate the transfer from the paper backing. Do not tear the transfer layer.

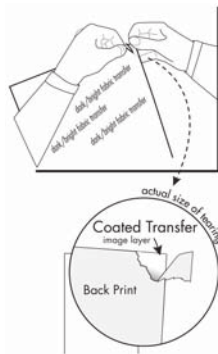

3. Trimming Your Transfer

- After tearing the corner, separate the layers and slowly peel the transfer just past the image.
- Stop there and replace the paper backing over the image.
- Trim around the image.
- After trimming, gently peel the entire backing away from the image.

4a. Using A Heat Press (Commercial Use)


- Place garment on press pad. Center transfer on garment (face up).
- Place parchment sheet over transfer, covering completely.
- Press at 375°F (190°C) with high pressure for 15 seconds.
- Peel away parchment sheet when cool (at least 2 minutes).

4b. Hand-Ironing Your Transfer

- Preheat iron for 5 minutes on hottest setting. Do not use steam setting!
- For proper pressure, use an ironing surface that is waist-level or lower. Do not use ironing board, glass, concrete, granite, or any soft or heat-sensitive surface!
- Fold the pillowcase in half and place it on the ironing surface with the open end hanging over the edge. Iron pillowcase to remove any wrinkles.
- Place garment face up over the center of the pillowcase. Iron the garment to remove any wrinkles.
- Center the transfer paper--image side up--on garment.
- Place parchment sheet over transfer, covering completely.

5. Hand-Ironing Technique

- Step A: Holding the iron as pictured, firmly slide across transfer paper from right to left, making 4 equal passes of 20 seconds each. Be sure to pass over all edges.
- Step B: Holding the iron as pictured, firmly slide the iron from bottom to top, making 5 passes of 20 seconds each. Be sure to pass over all edges.
- When cool, peel away parchment sheet

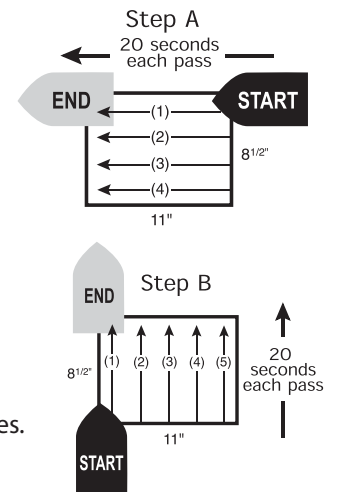

6. Washing Instructions

- Wash garment separately (first time only). Turn inside out.
- Machine wash cold with color-safe detergent. No bleach.
- Remove promptly from washer to prevent bleeding. If bleeding occurs, rewash immediately.
- Tumble dry with low heat. Add towels to facilitate drying.
- If garment needs ironing, do not iron directly on transfer.

IMPORTANT NOTE:

T-ShirtSupplies.com offers papers for inkjet, laser, thermal wax and sublimation printers and copiers. In all cases, our papers are optimized to perform with OEM inks and toners. T-ShirtSupplies.com does not warrant use of aftermarket inks and toners, and cannot guarantee satisfactory results. We recommend that you test any non-OEM inks or toners prior to use. Please visit our knowledge base at www.tshirtsupplies.com for more information.