



JetWear™ Dark High Gloss

Inkjet Transfer Paper

version 1.4.2


A transfer paper providing superb colored images on a white background for transferring onto black or dark colored cotton fabrics. Product is designed for use in all ink jet printers.

Printing and Preparing Image

- The whiter/smoothier surface (without back print) is the imaging side of the paper.
- Print design on the paper as normal image viewing (not as mirror image).
- Refer to printer settings (below); single-sheet feeding is recommended. Before printing final image, produce on economy grade paper to test for layout/design.

Cut Out Design

- Do not leave a margin around edge of the image.
- Round off edges to avoid corner liftoff after washing.

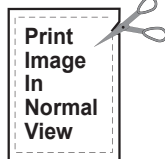

Peel Off Grid Backing Paper

- Remove backing paper by carefully tearing a corner and peeling away from the face/image or if scored, by peeling away at score line on backside.

Preparing to Transfer using a Hand-Iron

- Heat iron (without steam) to maximum cotton setting.
- Fabric should be 100% or 50/50 cotton; iron first if necessary to ensure flatness.
- Let fabric cool before ironing transfer image; lay fabric on hard, smooth surface.
- Place transfer paper with design facing upwards in desired position on fabric.
- Cover image with enclosed overlay paper.



Using A Heat Press (Commercial Use)


- Press at 345°F with medium pressure for 20 sec. or refer to your manufacturer's specifications.
- Fabric should be 100% cotton; press first if necessary to ensure flatness, then let cool.
- Place transfer paper with design facing upwards in desired position on fabric.
- Cover image with enclosed overlay paper

Ironing /Transferring Image

- Apply hot, dry iron and follow guidelines below for pressure and ironing time.
- Iron with non-stop motions from top to bottom and side to side.

Hand-Ironing Your Transfer

- Step A: Holding the iron as pictured, firmly slide across transfer paper from right to left, making 4 equal passes of 20 seconds each. Be sure to pass over all edges.

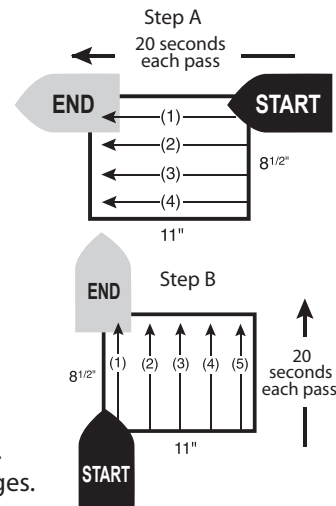

- Step B: Holding the iron as pictured, firmly slide the iron from bottom to top, making 5 passes of 20 seconds each. Be sure to pass over all edges.

Peel & Wear

- Allow fabric to cool completely, then smoothly and evenly peel away overlay paper.
- Touch up portions of image by covering with overlay paper again and ironing over area(s).

Washing Instructions

- Wait at least 24 hours before washing.
- Fabrics should be machine washed separately inside out (first time only) in cool or cold wash setting.
- Machine wash cold with color-safe detergent. No bleach.
- Remove promptly from washer to prevent bleeding. If bleeding occurs, rewash immediately.
- Tumble dry with low heat. Add towels to facilitate drying.
- To re-iron fabric after washing, do not iron directly on transferred image.

Important Notes:

Printer & Copier Inks

T-ShirtSupplies.com offers papers for inkjet, laser, and sublimation printers and copiers. In all cases, our papers are optimized to perform with OEM inks and toners. We do not warrant use of aftermarket inks and toners, and cannot guarantee satisfactory results. We recommend that you test any non-OEM inks or toners prior to use.

Product Quality Assurance

T-ShirtSupplies.com conducts exhaustive testing on all its products, using many types of substrates, printers, copiers, heat presses, irons, and laundry detergents. However, it is impossible to duplicate all printing and transfer processes, so we recommend testing your chosen paper to determine its suitability to your needs and equipment.

Please visit our knowledge base at www.tshirtsupplies.com for more information.